

FOOD WARMER

ITEM NO.81187A-3



Specifications	Capacity	: Fits One Full-size 100mm Gastronorm Pan or Two Bain-Maries
	Voltage	: 120V AC 60Hz
	Power Consumption	: 900 WATTS

Sunnex Food Warmer 81187A-3 is used with a Sunnex 1/1 Chafing Set and can take a single 1/1 Sunnex Gastronorm Pan up to 100mm depth or two 4 liter bain-marie soup pots. It is designed to keep food warm within the food pan or soup warm within the bain-maries in the chafing unit.

IMPORTANT SAFEGUARDS

- 1) Read all instructions.
- 2) Do not touch hot surfaces. Use handles or knobs.
- 3) **CAUTION** TO PROTECT AGAINST ELECTRICAL SHOCK, DO NOT IMMERSE CORD, PLUGS, OR THE APPLIANCE IN WATER OR OTHER LIQUID.
- 4) Close supervision is necessary when any appliance is used by or near children.
- 5) Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- 6) Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- 7) The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- 8) Do not use outdoors.
- 9) Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 10) Do not place on or near a hot gas or electric burner, or in a heated oven.
- 11) Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- 12) Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to off "O", then remove plug from wall outlet.
- 13) Do not use appliance for other than intended use.
- 14) The appliance must be earthed.
- 15) Do not operate when the Water Pan is empty. If more than one Food Warmer is plugged into wall outlet, a qualified electrician should be consulted.
- 16) **CAUTION** TO REDUCE THE RISK OF ELECTRIC SHOCK, COOK ONLY IN REMOVABLE CONTAINER.
- 17) **CAUTION** TO ENSURE CONTINUED PROTECTION AGAINST RISK OF ELECTRIC SHOCK, CONNECT TO PROPERLY GROUNDED OUTLETS ONLY.
- 18) **SAVE THESE INSTRUCTIONS.**

FOOD WARMER, ITEM NO. 81187A-3

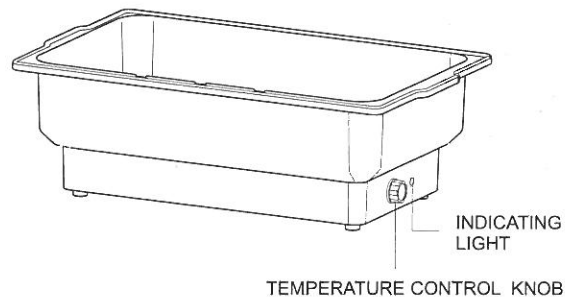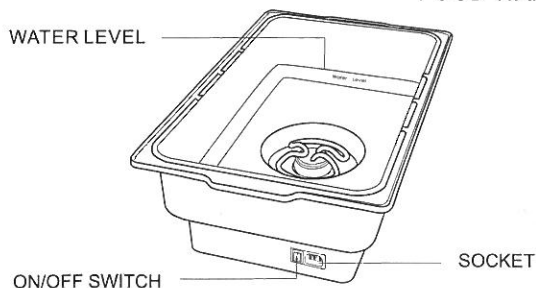

OPERATION

- 1) **TEMPERATURE CONTROL** - The temperature control knob is connected to an on/off switch. When the water reaches the pre-set temperature the power is automatically cut off. The power switch is marked with "I" and "O". When the switch is at "I" position, the main power is connected and the water pan will be ready for heating. When the switch is at "O" position, the main power is disconnected and the food warmer stops being heated. When temperature control knob is turned fully clockwise, the temperature is at the maximum setting. At the maximum setting water in the pan will be heated to approximate 85°C (±10°C). At this point some steam will be visible escaping around the edges of the food pan. If a lower temperature is required, turn the setting down. The temperature control knob will maintain the temperature at that setting about -20°C tolerance. Overheating of the water is protected by the safety thermostat, which cuts at 118°C.
- 2) **INDICATING LIGHT** - When the water is being heated, the indicating light beside the temperature knob comes on. When the water reaches the pre-set temperature, the power and the indicating light are automatically cut off. Should the temperature subsequently drop 20°C below the original temperature, the power will automatically be switched back on.
- 3) **WATER LEVEL** - Fill water up to the water line when using in conjunction with gastronorm food pan or bain maries. Ensuring heating element is fully covered with water. When the food pan or the bain maries start to float, it is an indication of too much water. If cold water is used, allow only 20 minutes before your required time of use. Hot water will give a quicker time of use.

CLEANING AND USER MAINTENANCE

- 1) Spilled food or soup should be removed immediately from all exterior surfaces. The exterior surfaces of the Food Warmer should be Wiped over with a damp cloth using a mild detergent.
- 2) Any other servicing should be performed by an authorized service representative or qualified electrician.
- 3) These appliances are for commercial and household use.
- 4) A short power-supply cord (or detachable power-supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord. If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.
- 5) Longer extension cords are available and may be used if care is exercised in their use.
- 6) If a long extension cord is used: